

Congratulations on your purchase of a fine, hand-built, Basslines electric bass pickup! Installing this pickup in your bass isn't rocket science. And, if you're already handy with tools, it'll be a snap for you—and fun too! But if you have no experience handling red-hot soldering irons, you'd be well advised to take your new pickup and your trusty bass to a qualified tech.

Wiring Diagram for Pickup Models:

SCPB-1 Vintage for Single-Coil P-Bass®


SCPB-2 Hot for Single-Coil P-Bass®

SCPB-3 Quarter-Pound for Single-Coil P-Bass®

5427 hollister avenue, santa barbara, ca 93111
tel 805.964.9610 fax 805.964.9749
www.basslines.com

The basic steps for installation include:

1. If your bass has a metal pickup cover, unscrew the cover from the top of the bass.
2. Remove the strings from your bass.
3. Remove the control plate and flip it over.
4. De-solder the original pickup's wires from the controls and make sure to remember where they were connected.
5. Remove the pickup from the pickup cavity.
6. Put your Basslines pickup into the pickup cavity.
7. Tin the wires from the Basslines pickup, and then solder them into place.
8. Replace the control plate (and pickup cover).
9. Re-string your bass, and adjust the pickup so that it is set about 1/8" from the strings when they are pressed down at the highest fret on the neck.
10. Replace the pickup cover.

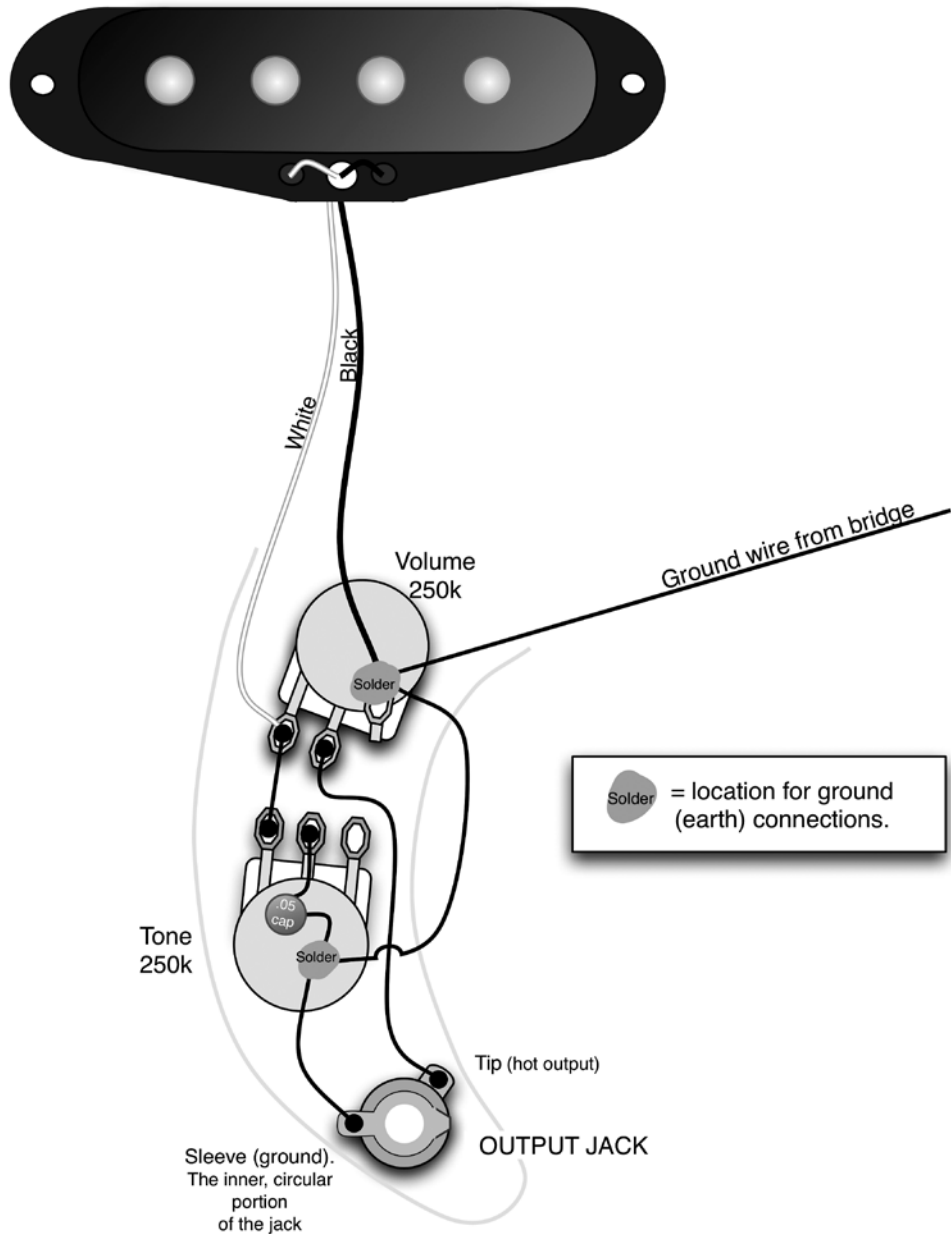

Visit basslines.com for additional wiring diagrams.

P-Bass and Fender are registered trademarks of FMIC, with which Basslines is not affiliated.